:hager



BS EN 61009-1 (GB) BS EN 62606



ARRxxxU

RCBO with dangerous arc detection



ARR906U

RCBO with dangerous arc detection 1M 6A B 6kA

ARR910U RCBO with dangerous arc detection 1M 10A B 6kA

ARR916U RCBO with dangerous arc detection 1M 16A B 6kA

ARR920U RCBO with dangerous arc detection 1M 20A B 6kA

ARR925U RCBO with dangerous arc detection 1M 25A B 6kA

ARR932U RCBO with dangerous arc detection 1M 32A B 6kA

Information

For more Information, scan the QR-Code on the product.

For further technical information and for installation in Hager Distribution Board, review the Installation Guidance Notes available in the products download section on Hager website.



Safety notice

The AFDD (Arc Fault Detection Device) may only be installed, connected and serviced by a qualified electrician. Before mounting, the AFDD must be checked for external damage. If any

damage or other defect is found, the device must not be mounted. The national regulations, safety regula-

tions and installation standards BS 7671 must be observed.

RCD characteristics 5 Idn compliance (according to table 1 & 2 BS EN 61009-1) for RCDs.

Design and layout of the

device



Fig 1: Layout of the device RCBO-AFDD

- 1) Test button
- (2) LED status display
- ③ Handle
- (4) Yellow flag
- (5) Mounting metal rail clip

Function

RCBO-AFD in 1 module ARRxxxU is a single device consisting of a miniature circuit breaker (MCB) unit and residual current detection (RCD) unit with integrated Arc fault detection (AFD) unit (3 in 1).

The AFDD mitigates the risk of a fire in the final electrical circuits of a fixed installation due to arcing fault currents, which under certain conditions present a fire ignition risk due to dangerous arc fault.

Tools

	LINE	LOAD
(mm ²)	1 to 16 🗆	1 to 25 🗆
	12 mm	10 mm
	🕀 PZ2	🕀 PZ2
	3,5 Nm	2,4 Nm

Fig 2: Tools



Installation and electricial connection

ZZ ()

DANGER!

Electric shock when touching live parts!

Electric shock can lead to death!

• Before commencing work ensure suitable isolation procedures have been followed.

Mount device

ď



Fig 3: Mounting the RCBO-AFDD

- Open the rail clip.
- Insert the AFDD until it is connected.
- Press the metal clamp down. The AFDD is fixed on the rail.

Connect device



Fig 4: Connect the RCBO-AFDD

Wiring diagram



Disassembly





Testing

The test button **T** is used for testing the device. The AFDD should trip following a short press of the test button. Following this the device can be switched on again.

Test device



ATTENTION !

Insulation tests at 500V DC may damage this product!

Do this test only when the handle is off.

If the handle is OFF you don't have to disconnect the cable.

Notice

The AFDD function must be tested after installation.The supply voltage must be present.

The RCBO-AFDD must trip within one second. If the device does not trip, it must be replaced by an competent electrician.



Fig 6: Testing the device • Short press the test button T. The RCBO-AFDD tripped, i.e. the circuit must switch off.

Notice (i)



LED status for troubleshooting



Fig 7: Handle position during testing: OFF The handle is in the OFF position.

• Keep the test button T pressed, to open the color code.

INDICATOR		STATE
	Steady GREEN	AFDD is ON
	LED is OFF	AFDD is OFF
	Blinking RED/ GREEN + yellow flag absence	AFDD manual tripped
	Blinking RED/ GREEN + yellow flag presence	Overload or Short-Circuit
-	Steady RED	Residual current fault
$\frac{\sqrt{1/2}}{\sqrt{1/2}} = \frac{\sqrt{1/2}}{\sqrt{1/2}}$	Blinking RED/ YELLOW	Series arc fault
	Blinking RED	Parallel arc fault
	Steady YELLOW	Overvoltage
	Blinking YELLOW	Internal failure

Table 1: LED status display for a standard troubleshooting

Notice In case of an internal failure, replace the AFDD and contact the Hager technical support.

Connection to mobilephone

A mobile phone (iphone, operating with IOS14 or above, or Android, operating with Android 7 or above) is required to use those functions.



Notice

Using the connected functions with your mobile phone requires to activate network functions (Bluetooth, WiFi) and to accept the application terms of use & privacy notice.

Only bluetooth 4.2 or above is supported.

- Install the Hager Pilot mobile application on your mobilephone.
- Follow further instructions on the mobile application.

LED status for Bluetooth® connection



Fig 8: Handle during testing: ON The handle is in the **ON** position.

 Press the test button T for 5 seconds to activate bluetooth mode.

INDICATOR		STATE
1 / 2 2 / 1 / 2	Blinking BLUE	Bluetooth enabled
	Steady BLUE	Bluetooth connected
業業	Blinking RED/BLUE	Update mode (only overload and short- circuit protection in this mode)
**	Blinking BLUE/ YELLOW	Trace mode (use for technical Hager support)
	Blinking (BLUE/ GREEN)	Firmware update confirmation requested

Table 2: LED status display for Bluetooth® connection

EU and UKCA Declaration

Hereby, Hager Electro SAS, declares that the AFDD products are in compliance with SI 2017/1206 Radio Equipment Regulations 2017 and with radio emission directive 2014/53/EU

- Operating frequency band 2.4 to 2.483 GHz. - Maximum radio frequency power 10mW. Declarations of conformity can be downloaded on www.hager.com